

INTERSECTIONDISPLAY System Variable — GstarCAD 2027

5641 kbadmin September 26, 2026 [Command Reference](#) 0 15

INTERSECTIONDISPLAY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The INTERSECTIONDISPLAY system variable is used to control the display of intersection edges in current viewport.

Type	Parameter
Saved in	Drawing
Initial value	0
Range	0,1

Note: the INTERSECTIONCOLOR system variable controls the intersection polyline color only in 2D frame visual style.

System Variable Value:

0:off
1:on

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5641>