

Justify Text — GstarCAD 2027

5647 kbadmin September 26, 2026 [Command Reference](#) 0 16

Justify Text

[GstarCAD 2027](#) · [Command Reference](#)

TheTJUST command is used to change a text object's justification without changing its position. Works with text, mtext, and attribute definition objects.

Select objects: Use an object selection method

[Start/Center/Middle/Right/TL/TC/TR/ML/MC/MR/BL/BC/BR] <Start>: Choose the new justification

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5647>