

LAYEREVALCTL System Variable — GstarCAD 2027

5655 kbadmin September 26, 2026 [Command Reference](#) 0 6

LAYEREVALCTL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LAYEREVALCTL system variable is used to control the unreconciled new layer filter list for evaluating new layers in the layer properties manager.

Type	Integer
Saved in	User-settings
Initial value	1
Range	0,1

This system variable also controls whether to display new layer notify.

System Variable Value:

- 0:** disabled the new layer evaluating and notification
 - 1:** enable new layer evaluating by LAYEREVAL settings
- Note:** if specified the LAYEREVALCTL system variable to be 0, the settings of LAYEREVAL and LAYERNOTIFY will be ignored.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5655>