

LAYERNOTIFY System Variable — GstarCAD 2027

5658 kbadmin September 26, 2026 [Command Reference](#) 0 6

LAYERNOTIFY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LAYERNOTIFY system variable is used to specify when a warning displays when unreconciled new layers are found.

Type	Bitcode
Saved in	Drawing
Initial value	0
Range	-63 ~ 63

System Variable Value:

- 0: off
- 1: plot
- 2: on
- 4: load/reload/attach xrefs
- 8: restore layer state
- 16: save
- 32: insert

Note: if specified the LAYEREVALCTL system variable to be 0, the settings of LAYEREVAL and LAYERNOTIFY will be ignored.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5658>