

LAYOUTREGENCTL System Variable — GstarCAD 2027

LAYOUTREGENCTL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LAYOUTREGENCTL system variable is used to specify how the displayed list updating for specified model tab and layout tab.

Type	Integer
Saved in	Registry
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** regenerate drawing when switching tabs
- 1:** For the Model tab and the last layout made current, the display list is saved to memory and regenerations are suppressed when you switch between the two tabs. For all other layouts, regenerations still occur when you switch to those tabs
- 2:** The drawing is regenerated the first time you switch to each tab. For the remainder of the drawing session, the display list is saved to memory and regenerations are suppressed when you switch to those tabs.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5660>