

LIGHTGLYPHDISPLAY System Variable — GstarCAD 2027

5664 kbadmin September 26, 2026 [Command Reference](#) 0 14

LIGHTGLYPHDISPLAY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LIGHTGLYPHDISPLAY system variable is used to control the display of light glyphs.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

The light glyphs is symbols for point light and spotlight.

System Variable Value:

- 0:off
- 1:on

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5664>

