

LIMCHECK System Variable — GstarCAD 2027

LIMCHECK System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LIMCHECK system variable is used to control whether it is allowed to create objects beyond grid limits.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

When this system variable is off, the light in block has no effect on 3D objects rendering in current viewport.

System Variable Value:

- 0:** it is allowed to create objects beyond grid limits
- 1:** it is not allowed to create objects beyond grid limits

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5668>