

LOCALROOTPREFIX System Variable — GstarCAD 2027

5674 kbadmin September 26, 2026 [Command Reference](#) 0 6

LOCALROOTPREFIX System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOCALROOTPREFIX system variable is used to store the full path to the root folder where local customizable files installed.
(Read-Only)

Type	Strings
Saved in	Registry
Initial value	Unknown

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5674>