

LOCKUI System Variable — GstarCAD 2027

5675 kbadmin September 26, 2026 [Command Reference](#) 0 6

LOCKUI System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOCKUI system variable is used to lock the location and size for tool bar and dockable windows(such as design center and property palettes).

Type	Bitcode
Saved in	Registry
Initial value	0
Range	0 ~ 15

The locked toolbar and windows still can open or close, and add or delete items. Pressing Ctrl key to temporarily unlock.

System Variable Value:

- 0:** do not lock toolbars and windows
- 1:** docked toolbar locked
- 2:** docked or anchored windows locked
- 4:** floating toolbars locked
- 8:** floating windows locked

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5675>