

LOFTANG1 System Variable — GstarCAD 2027

5676 kbadmin September 26, 2026 [Command Reference](#) 0 13

LOFTANG1 System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOFTANG1 system variable is used to set the draft angle through the first cross section in the loft operation.

Type	Real
Saved in	Drawing
Initial value	90
Range	0 ~ 360

The 0 direction is measured outward from the curve on the plane of the curve. The positive direction is measured toward the next cross section.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5676>