

LOFTMAG1 System Variable — GstarCAD 2027

5678 kbadmin September 26, 2026 [Command Reference](#) 0 11

LOFTMAG1 System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOFTMAG1 system variable is used to set the amplitude of draft angle through the first cross section in the loft operation.

Type	Real
Saved in	Drawing
Initial value	0.0000

This system variable can control how fast the surface starts bending toward the next cross section.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5678>