

LOFTNORMALS System Variable — GstarCAD 2027

5680 kbadmin September 26, 2026 [Command Reference](#) 0 17

LOFTNORMALS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOFTNORMALS system variable is used to control the normals of a lofted object when it passes through cross sections.

Type	Integer
Saved in	Drawing
Initial value	6
Range	0 ~ 6

If specified paths or guide curves, this system variable is ignored.

System Variable Value:

- 0:** ruled
- 1:** smooth fit
- 2:** start cross section
- 3:** end cross section
- 4:** start and end cross sections
- 5:** all cross sections
- 6:** use draft angle and magnitude

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5680>