

LOFTPARAM System Variable — GstarCAD 2027

5681 kbadmin September 26, 2026 [Command Reference](#) 0 13

LOFTPARAM System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOFTPARAM system variable is used to control the shapes for loft solids and surfaces.

Type	Bitcode
Saved in	Drawing
Initial value	7
Range	0 ~ 15

System Variable Value:

- 1: no twist(minimize the twist between cross sections)
- 2: align direction(align the start and end directions for each section curves)
- 4: simplify(generate simple solids and surface, such as cylinder or planes, rather than spline solids or surfaces)
- 8: close(close the surface or solid between the first and last cross section)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)