

LOGINNAME System Variable — GstarCAD 2027

5685 kbadmin September 26, 2026 [Command Reference](#) 0 17

LOGINNAME System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LOGINNAME system variable is used to display current login users 'name, and store it together with DWG file and relation documentation properties statistic information.
(Read-Only)

Type	Strings
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5685>