

# LONGITUDE System Variable — GstarCAD 2027

5686 kbadmin September 26, 2026 [Command Reference](#) 0 16

## LONGITUDE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The LONGITUDE system variable is used to specify the longitude of geographic marker.

|               |          |
|---------------|----------|
| Type          | Real     |
| Saved in      | Drawing  |
| Initial value | -122.394 |

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5686>