

LTSCALE System Variable — GstarCAD 2027

5687 kbadmin September 26, 2026 [Command Reference](#) 0 11

LTSCALE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LTSCALE system variable is used to set the global linetype scale factor.

Type	Real
Saved in	Drawing
Initial value	1
Range	Above 0

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5687>