

LWDISPLAY System Variable — GstarCAD 2027

5691 kbadmin September 26, 2026 [Command Reference](#) 0 11

LWDISPLAY System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The LWDISPLAY system variable is used to control whether to display object lineweight.

Type	Parameter
Saved in	Drawing
Initial value	off

System Variable Value:

- off:** do not display lineweight
- on:** do not display lineweight

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5691>