

MEASUREINIT System Variable — GstarCAD 2027

5714 kbadmin September 26, 2026 [Command Reference](#) 0 17

MEASUREINIT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The MEASUREINIT system variable is used to control whether a drawing started from scratch using imperial or metric default settings.

Type	Integer
Saved in	Registry
Initial value	Vary by country /region
Range	0,1

System Variable Value:

- 0: imperial
- 1: metric

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5714>