

MEASUREMENT System Variable — GstarCAD 2027

5715 kbadmin September 26, 2026 [Command Reference](#) 0 11

MEASUREMENT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The MEASUREMENT system variable is used to control whether the current drawing using imperial or metric hatch pattern and linetype files.

Type	Integer
Saved in	Drawing
Initial value	0(Imperial) or 1(Metric)
Range	0,1

System Variable Value:

- 0: imperial
- 1: metric

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5715>