

MODEMACRO System Variable — GstarCAD 2027

5723 kbadmin September 26, 2026 [Command Reference](#) 0 7

MODEMACRO System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The MODEMACRO system variable is used to display text strings in status bar, such as current drawing name, time/data stamp or special modes.

Type	Strings
Saved in	Not saved
Initial value	""

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5723>