

MSOLESCALE System Variable — GstarCAD 2027

5725 kbadmin September 26, 2026 [Command Reference](#) 0 19

MSOLESCALE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The MSOLESCALE system variable is used to control the OLE text object size that pasted to model space.

Type	Real
Saved in	Drawing
Initial value	1.0000

The MSOLESCALE system variable only controls the initial size. Changing its value has no effect on current OLE objects sizes.
The positive value will scale by its value. Entering 0 to scale by value of DIMSCALE.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5725>