

MTEXTCOLUMN System Variable — GstarCAD 2027

5726 kbadmin September 26, 2026 [Command Reference](#) 0 18

MTEXTCOLUMN System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The MTEXTCOLUMN system variable is used to set the default column setting for an mtext object.

Type	Integer
Saved in	Drawing
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** without column
- 1:** adjust the height of dynamic bar automatically
- 2:** adjust the height of dynamic bar manually

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5726>