

NAVVCUBELOCATION System Variable — GstarCAD 2027

5751 kbadmin September 26, 2026 [Command Reference](#) 0 14

NAVVCUBELOCATION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The NAVVCUBELOCATION system variable is used to mark the corner point of viewport to display ViewCube tool.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1,2,3

System Variable Value:

- 0: right-top
- 1: left-top
- 2: left-bottom
- 3: right-bottom

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)