

NAVVCUBESIZE System Variable — GstarCAD 2027

5754 kbadmin September 26, 2026 [Command Reference](#) 0 18

NAVVCUBESIZE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The NAVVCUBESIZE system variable is used to specify the size of ViewCube tool.

Type	Integer
Saved in	Registry
Initial value	4
Range	0,1,2,3,4

System Variable Value:

- 0:**small
- 1:**normal
- 2:**big
- 3:**smallest
- 4:**auto;the size of ViewCube can be scaled by scale factor of active viewport or active layout, or the size of drawing window

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5754>

