

# NOMUTT System Variable — GstarCAD 2027

## NOMUTT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The NOMUTT system variable is used to suppress the message display when it shouldn't be suppressed normally.

|               |               |
|---------------|---------------|
| Type          | Short Integer |
| Saved in      | Not saved     |
| Initial value | 0             |
| Range         | 0,1           |

All messages in command line and feedbacks display in normal mode. Suppress message display when running scripts, AutoLISP programs, and others programs.

### System Variable Value:

- 0:** restore message display normally
- 1:** suppress uncertain message display

### Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5756>