

NORTHDIRECTION System Variable — GstarCAD 2027

5757 kbadmin September 26, 2026 [Command Reference](#) 0 8

NORTHDIRECTION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The NORTHDIRECTION system variable is used to specify the angle between the Y axis of WCS and north of grid.

Type	Real
Saved in	Drawing
Initial value	0.0000

This system variable is not affected by AUNITS and AUPREC.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5757>