

OBSCUREDLTTYPE System Variable — GstarCAD 2027

5761 kbadmin September 26, 2026 [Command Reference](#) 0 8

OBSCUREDLTTYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OBSCUREDLTTYPE system variable is used to specify the lietype of obscured lines.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 11

The obscured line is a kind of hidden lines. Users can change its color and linetype to make it visuable. The OBSCUREDCOLOR system variable can only be used in 2D viewport. In 3D viewport users should use the VSOBSCUREDCOLOR system variable.

System Variable Value:

- 0: off
- 1: solid
- 2:dashed
- 3:dotted
- 4:short dash
- 5:medium dash
- 6:long dash
- 7:double short dash
- 8:double medium dash
- 9:double long dash

10:medium long dash

11:sparse dot

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5761>