

OPENPARTIAL System Variable — GstarCAD 2027

5768 kbadmin September 26, 2026 [Command Reference](#) 0 12

OPENPARTIAL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OPENPARTIAL system variable is used to control whether the drawing can be operated before it completely opened.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

The OPENPARTIAL system variable is used to control whether the drawing can be operated before it completely opened.

System Variable Value:

- 0:** the drawing must be fully opened before operations on it
- 1:** the drawing can be edited before fully opened

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5768>