

OPMSTATE System Variable — GstarCAD 2027

OPMSTATE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OPMSTATE system variable is used to specify whether the property palettes is open, closed, or hidden.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** closed
- 1:** open
- 2:** auto hidden: when property palettes is opened it only displays title bar as cursor moving away from palettes

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

