

OSDIVIDE System Variable — GstarCAD 2027

5772 kbadmin September 26, 2026 [Command Reference](#) 0 7

OSDIVIDE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OSDIVIDE system variable is used to specify the segments of Divide OSnap.

Type	Integer
Saved in	Drawing
Initial value	3
Range	3-100

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5772>