

OSMODE System Variable — GstarCAD 2027

OSMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OSMODE system variable is used to set the object snap running mode.

Type	Integer
Saved in	Registry
Initial value	37
Range	0 ~ 32767

System Variable Value:

- 0:** none
- 1:** END (point)
- 2:** MID (middle point)
- 4:** CEN (center point)
- 8:** NOD (node)
- 16:** NOD (node)
- 32:** NOD (node)
- 64:** NOD (node)
- 128:** NOD (node)
- 256:**TAN(tangent point)
- 512:**NEA(nearest point)
- 1024:** pclear all object snaps
- 2048:** APP (apparent intersection)
- 4096:** APP (apparent intersection)
- 8192:** PAR (parallel)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5773>