

OSNAPCOORD System Variable — GstarCAD 2027

5774 kbadmin September 26, 2026 [Command Reference](#) 0 11

OSNAPCOORD System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OSNAPCOORD system variable is used to control whether the entered coordinates in command line replaces the running object snap.

Type	Integer
Saved in	Registry
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** the running object snap replaces keyboard entering coordinates
- 1:** the running object snap replaces keyboard entering coordinates
- 2:** keyboard entering coordinates replaces the running object snap except for settings of scripts

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5774>