

OSNAPZ System Variable — GstarCAD 2027

5776 kbadmin September 26, 2026 [Command Reference](#) 0 17

OSNAPZ System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OSNAPZ system variable is used to control whether the object snap automatically project to the plane which is parallel with the XY plane of current elevation in current UCS.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:** the object snap uses specified Z value of point
- 1:** the object snap uses the set elevation to replace specified Z value of point

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5776>