

OSOPTIONS System Variable — GstarCAD 2027

5777 kbadmin September 26, 2026 [Command Reference](#) 0 9

OSOPTIONS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The OSOPTIONS system variable is used to control whether to suppress object snap on hatch objects, geometry with negative Z values, or dimension extension lines.

Type	Bitcode
Saved in	Registry
Initial value	3
Range	0 ~ 3

System Variable Value:

- 0:** users can object snap on hatch objects and geometry with negative Z values when in dynamic UCS
- 1:** the object snap ignores hatch objects
- 2:** the object snap ignores geometry with negative Z values when in dynamic UCS

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5777>