

PARAMETERSSTATUS System Variable — GstarCAD 2027

5793 kbadmin September 26, 2026 [Command Reference](#) 0 8

PARAMETERSSTATUS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PARAMETERSSTATUS system variable is used to specify whether the parameter manager is displayed or hidden.
(Read-Only)

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0: hidden
- 1: display

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5793>