

PASTERANGE System Variable — GstarCAD 2027

5795 kbadmin September 26, 2026 [Command Reference](#) 0 10

PASTERANGE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PASTERANGE system variable is used to control whether to trim the blank areas around selected entities when copying them to the clipboard for use in external programs.

Type	Integer
Saved in	Registry
Initial value	1
Range	0/1/2

System Variable Value:

- 0:** Copy the entire viewport image of the selection set, retaining all blank areas.
- 1:** Automatically crop the image to tightly match the bounding box of the entity selection set, removing blank areas.
- 2:** Only display the bounding box range of the entity selection set within the current viewport, removing blank areas.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5795>