

PDFOSNAP System Variable — GstarCAD 2027

5797 kbadmin September 26, 2026 [Command Reference](#) 0 15

PDFOSNAP System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PDFOSNAP system variable is used to determine whether to active object snap for geometric drawing in PDF underlay attached in drawing

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0: object snapping is disabled for geometry in all PDF underlay attachments in the drawing
- 1: object snapping is enabled for geometry in all PDF underlay attachments in the drawing

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5797>