

PDMODE System Variable — GstarCAD 2027

5798 kbadmin September 26, 2026 [Command Reference](#) 0 9

PDMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PDMODE system variable is used to control how to display point objects.

Type	Integer
Saved in	Drawing
Initial value	0

Values of 0, 2, 3, and 4 provide different geometric representations of point objects. A value of 1 specifies that nothing is displayed.

Specifying the value 32, 64, or 96 specifies a shape to draw around the point, in addition to the geometry drawn through it.

The PDSIZE system variable controls the size of points.

After changing PDMODE and PDSIZE, the appearance of existing points updates the next time that the drawing is regenerated.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5798>