

PERSPECTIVE System Variable — GstarCAD 2027

PERSPECTIVE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PERSPECTIVE system variable is used to determine whether the current viewport displays a perspective view.

Type	Integer
Saved in	Drawing
Initial value	Unknown
Range	0,1

The perspective view is available in model space in 3D visual styles.

System Variable Value:

- 0:** close perspective view
- 1:** open perspective view

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5803>