

POLARADDANG System Variable — GstarCAD 2027

5822 kbadmin September 26, 2026 [Command Reference](#) 0 7

POLARADDANG System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The POLARADDANG system variable is used to store the additional angle for polar tracking and polar snap.

Type	Strings
Saved in	Registry
Initial value	""

Users can add up to 10 angles. They can separated by commas. The AUNITS system variable can set angle displaying formats.
The POLARMODE system variable must be set to be 5, or the POLARADDANG does not have effect.
When using fractions of an angle, set the AUPREC system variable (angular precision) to a higher value.
Otherwise, the POLARADDANG value will be rounded off.
.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5822>