

POLARDIST System Variable — GstarCAD 2027

5824 kbadmin September 26, 2026 [Command Reference](#) 0 13

POLARDIST System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The POLARDIST system variable is used to set snap increment when SNAPTTYPE set to be 1.

Type	Real
Saved in	Registry
Initial value	0.0000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5824>