

POPUPS System Variable — GstarCAD 2027

5827 kbadmin September 26, 2026 [Command Reference](#) 0 9

POPUPS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The POPUPS system variable is used to display the status of current configured display driver.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not support dialog box, menu bar, and icon menu
1: support those features

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)