

PREVIEWTYPE System Variable — GstarCAD 2027

5831 kbadmin September 26, 2026 [Command Reference](#) 0 20

PREVIEWTYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PREVIEWTYPE system variable is used to control which viewport will use the drawing thumbnail preview.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** use last saved view
- 1:** use the main view

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)