

PSOLWIDTH System Variable — GstarCAD 2027

5844 kbadmin September 26, 2026 [Command Reference](#) 0 10

PSOLWIDTH System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PSOLWIDTH system variable is used to control the default width of swept solid objects.

Type	Real
Saved in	Drawing
Initial value	0.2500(Imperial) or 5.0000(Metric)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5844>