

PUCSBASE System Variable — GstarCAD 2027

5851 kbadmin September 26, 2026 [Command Reference](#) 0 11

PUCSBASE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The PUCSBASE system variable is used to store the UCS name defines origin and orientation for ortho UCS settings(only in paper space).

Type	Strings
Saved in	Drawing
Initial value	""

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5851>