

QPLOCATION System Variable — GstarCAD 2027

5863 kbadmin September 26, 2026 [Command Reference](#) 0 5

QPLOCATION System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The QPLOCATION system variable is used to set the location of quick property palettes.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** display quick property palettes relative the location of cursor
- 1:** display quick property palettes at a fixed location regardless of cursor

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5863>