

QTEXTMODE System Variable — GstarCAD 2027

QTEXTMODE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The QTEXTMODE system variable is used to control how to display text.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** turn off quick text mode and display characters
- 1:** turn on quick text mode and display text frame instead of text

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)