

QVDRAWINGPIN System Variable — GstarCAD 2027

5866 kbadmin September 26, 2026 [Command Reference](#) 0 6

QVDRAWINGPIN System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The QVDRAWINGPIN system variable is used to control the default display state of preview images of drawing.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0: display preview images of drawing in an unpinned state
- 1: display preview images of drawing in a pinned state

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5866>