

# RASTERPERCENT System Variable — GstarCAD 2027

5869 kbadmin September 26, 2026 [Command Reference](#) 0 9

## RASTERPERCENT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The RASTERPERCENT system variable is used to set the maximum available virtual memory for plotting a raster image.

|               |          |
|---------------|----------|
| Type          | Integer  |
| Saved in      | Registry |
| Initial value | 20       |

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5869>