

REBUILDDEGREEV System Variable — GstarCAD 2027

5877 kbadmin September 26, 2026 [Command Reference](#) 0 12

REBUILDDEGREEV System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The REBUILDDEGREEV system variable is used to set the degree in V direction when rebuilding NURBS surfaces.

Type	Integer
Saved in	Registry
Initial value	3
Range	2 ~ 11

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=5877>